



Models 6550 & 6555



Expert tools for testing insulation safely and accurately; ideal for use on rotating machinery and cables operating at higher voltages

► SPECIFICATIONS

> SPECIFICATION 5		
MODELS	6550	6555
INSULATION TESTS		
Test Voltage 500V 1000V 2500V 5000V 10,000V	10kΩ to 2000GΩ (2TΩ) 10kΩ to 4000GΩ (4TΩ) 10kΩ to 10,000GΩ (10TΩ) 10kΩ to 15,000GΩ (15TΩ) 10kΩ to 25,000GΩ (25TΩ)	
15,000V	500/1000/2500/5000/	10kΩ to 30,000GΩ (30TΩ) 500/1000/2500/5000/
Fixed Test Voltages	10,000V	10,000/15,000V
Variable Voltages	Variable: 40V to 10kV Three user programmable voltage schemes	Variable: 40V to 15kV Three user programmable voltage schemes
Ramp Mode	Programmable ramps: start	voltage/end voltage/duration
Ramp Configuration Range	40 to 1100V/500 to 10,000V	40 to 1100V/500 to 15,000V
Step Mode	Up to 10 steps (voltage and duration configurable for each step)	
Voltage Measurement After Test	0 to 2500Vac; 0 to 4000Vbc	
Capacitance Measurement	0.05 to 9.999µF/10.00 to 49.99µF	
Leakage Current Measurement	0 to 8mA	
Discharge After Test	Yes/Automatic	
Additional Test Stop Modes	Programmable: 0.2 to 5mA	
I-Limit Early-Break	Programmable: 0.2 to 5mA di/dt	
Timer	Up to 99 minutes 59 seconds	
Burn Mode	Constant testing	
Ratio Calculation	PI, DAR, DD	
Calculation of R at ref. T°	Yes	
Measurement Display Filter	3 filters with 3 possible time-constants	
Graphs on Display	R(t)+V(t); I(t); I(V)	
Storage	256 registers, stores 80,000 points: R, V, I and date	
Communication	USB optically-isolated port	
PC Software	DataView®	
Power Supply	NiMH rechargeable batteries, two 9.6V 4Ah battery packs charging by external voltage: 90 to 260V; 50/60Hz	
Battery Charging	Battery charging allowed while performing insulation measurements	
Electrical Safety	1000V CAT IV; IEC61010-1 and IEC 61557	
EMC, Mechanical Protection, Altitude	EN 61326-1, IP54, 3000m	
Dimensions/Weight	13.39 x 11.81 x 7.87" (340 x 300 x 200mm)/approx. 6.2kg (excluding accessories)	









Read our technical tips on Insulation **Resistance Testing**





► DataView® Software Included with





One red, blue and black 9 ft 15kV, one 15kV jumper leap (blue), integral lead, one red, blue and black alligator clip (1000V CAT IV), one red and blue test probe (1000V CAT IV), optical USB cable, US 115V power cord, small classic tool bag, user manual


>> See page 16 for ordering information




► PRODUCT INCLUDES

Models 6550 & 6555

${\sf Data} View^{\scriptscriptstyle \otimes}$ Displays

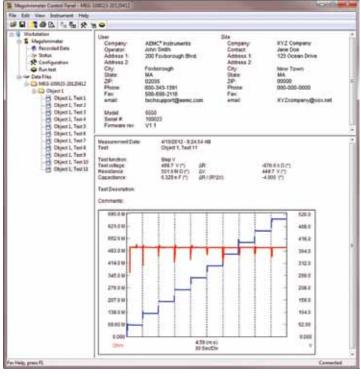


All stored test results presented on screen.

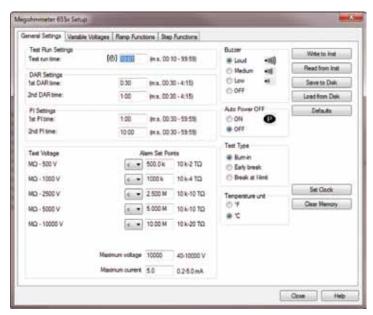


Clear and straight forward set up of parameters.

► FEATURES

- True Megohmmeter®
- Fixed or programmable test voltage from 40V to 10kV/15kV
- Wide measurement range from 10kΩ to 30TΩ
- 5mA charging current
- · Step voltage testing
- Ramp voltage testing
- Automatic calculation of DAR / PI / DD /∆R (ppm/V) ratios
- Large, backlit graphical LCD screen with digital display, bargraph and R(t)+V(t), I(t)and I(V) graphs
- Multiple test modes: voltage ramp and step with "Burn-In", "Early-Break" and "I-Limit"
- Three filter settings to optimize measurement stability
- Calculation of R at a reference temperature
- Storage of 80,000 measurements
- Includes DataView® software for data storage, real-time display, analysis and report generation
- Optically-isolated USB communication for transfer onto PC and report generation with DataView® software

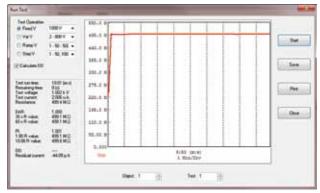

Real-time display of measurement results.




Data View ®


Data Analysis and Reporting Software for Megohmmeters








- Select test voltage and run tests from your computer with a simple click and execute process
- Capture and display data in real-time
- Retrieve data from the instrument's memory:
 - Over 1500 insulation resistance measurements
 - Over 4000 resistance measurements
- Display DAR and PI ratios
- Plot graphs of manual and timed tests
- Include your analysis comments section with the report
- Store a library of setups for different applications
- Certification of results through report generation
- Free updates are available on our website www.aemc.com

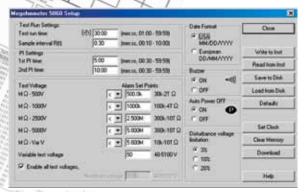

Clear and easy setup from one dialog box for Model 5060.



Four tabbed dialog boxes allow for clear and easy setup of all functions of the Model 5070, including setup for variable voltage and alarm set points, as well as step voltage tests and temperature compensation.

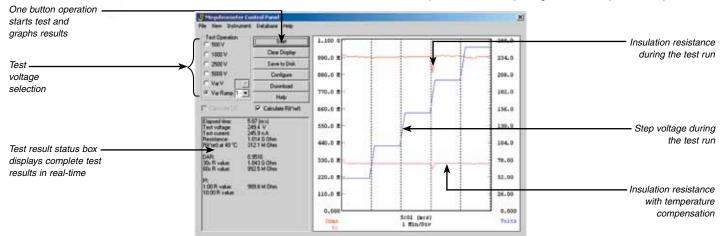

Run test and display text and graphical results from one dialog box. Model 5070 also displays step voltage.

